 


Fig. 1

FIG. 3

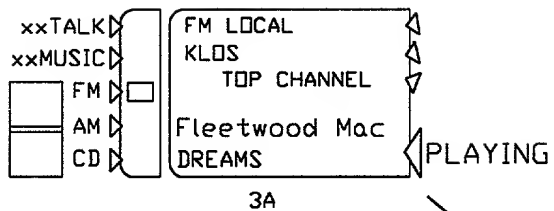

Delete

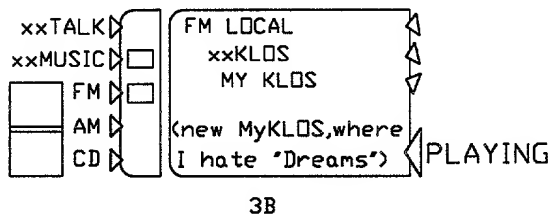 


FIG. 2

 
 
 
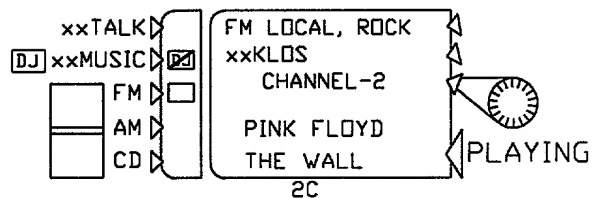 


FIG. 4

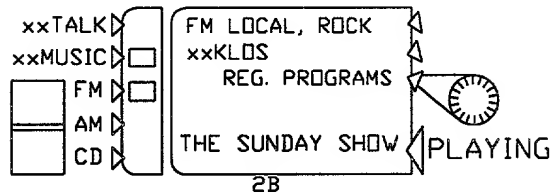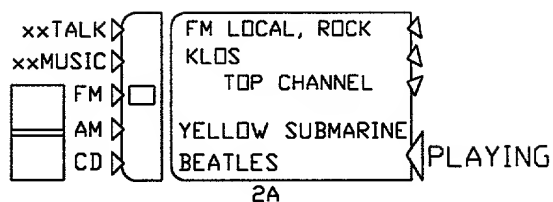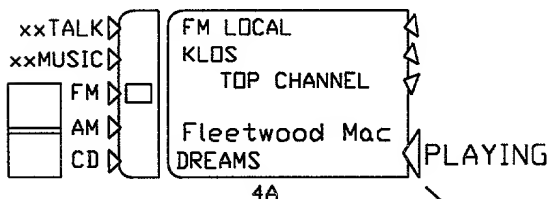

Send/
Fwd

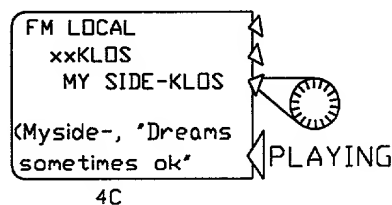 


FIG. 5

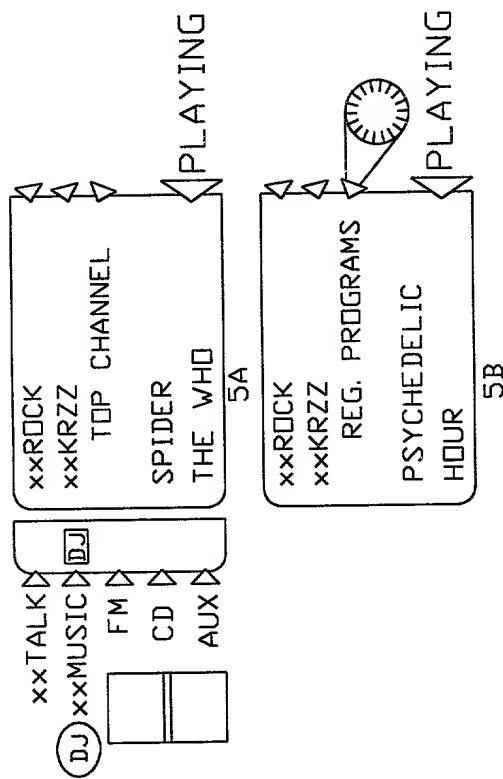 


FIG. 6

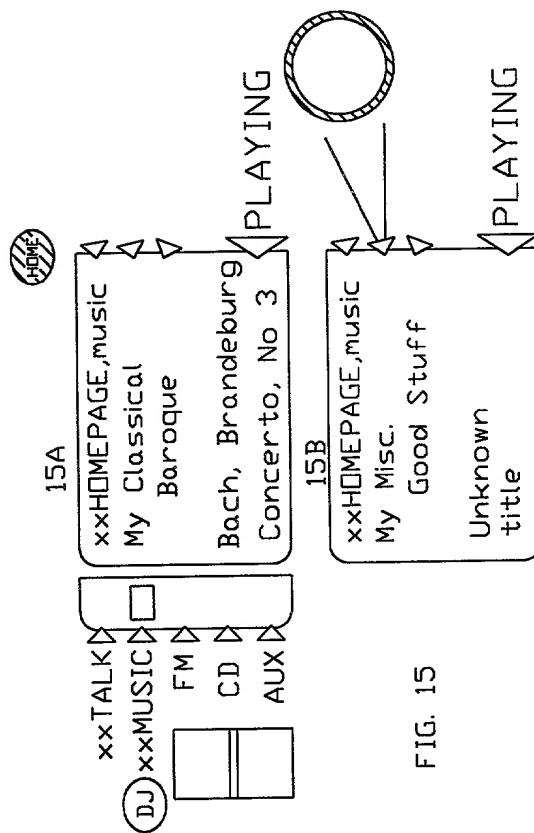 
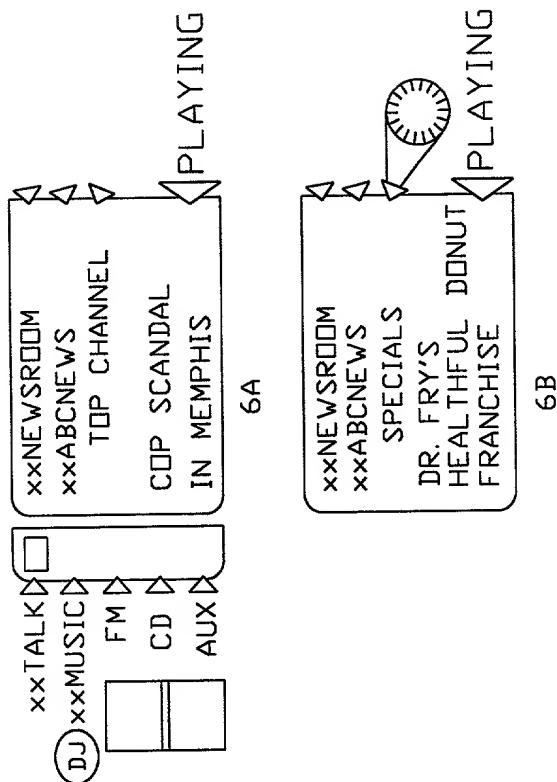 


FIG. 15

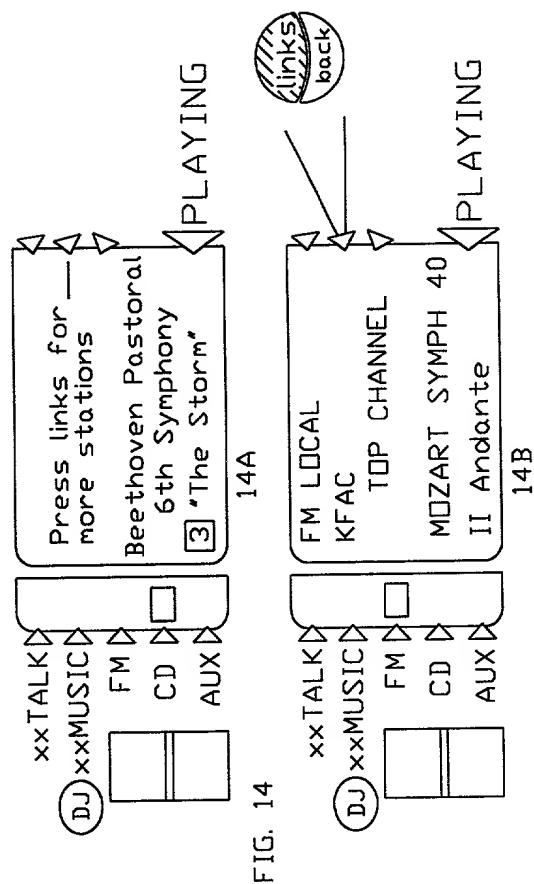 


FIG. 14

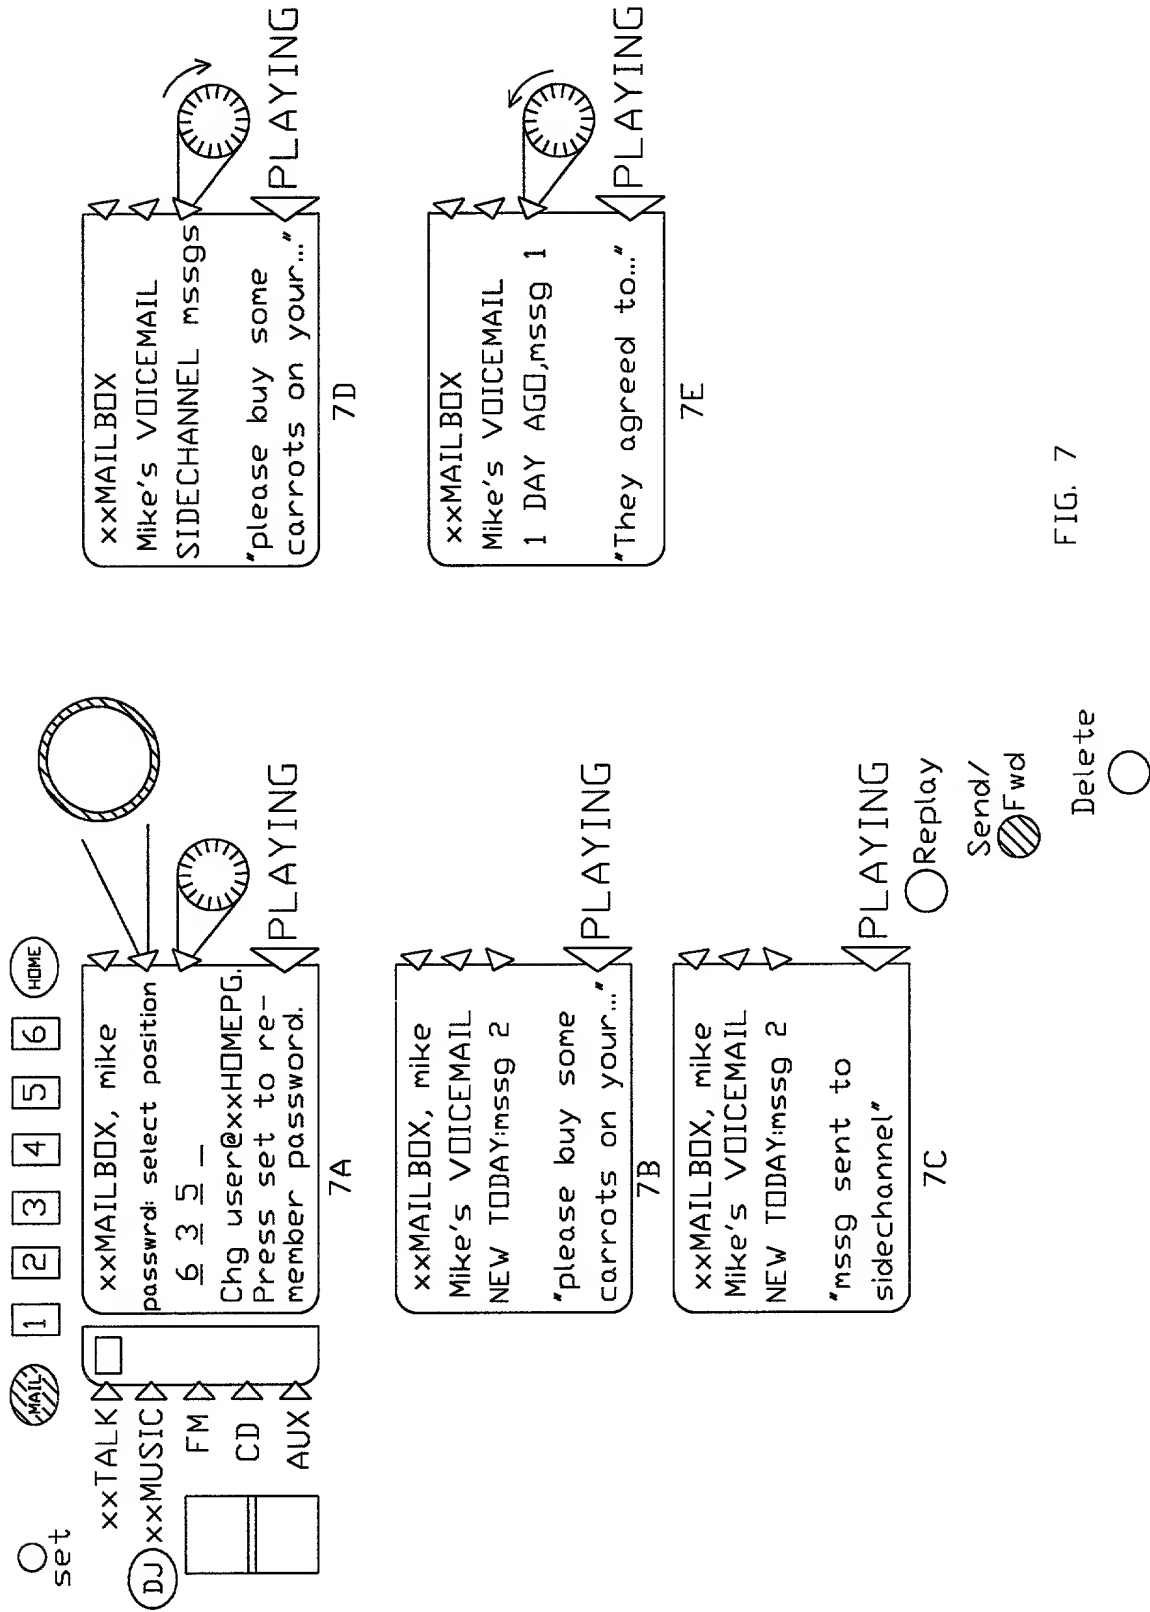 


FIG. 7

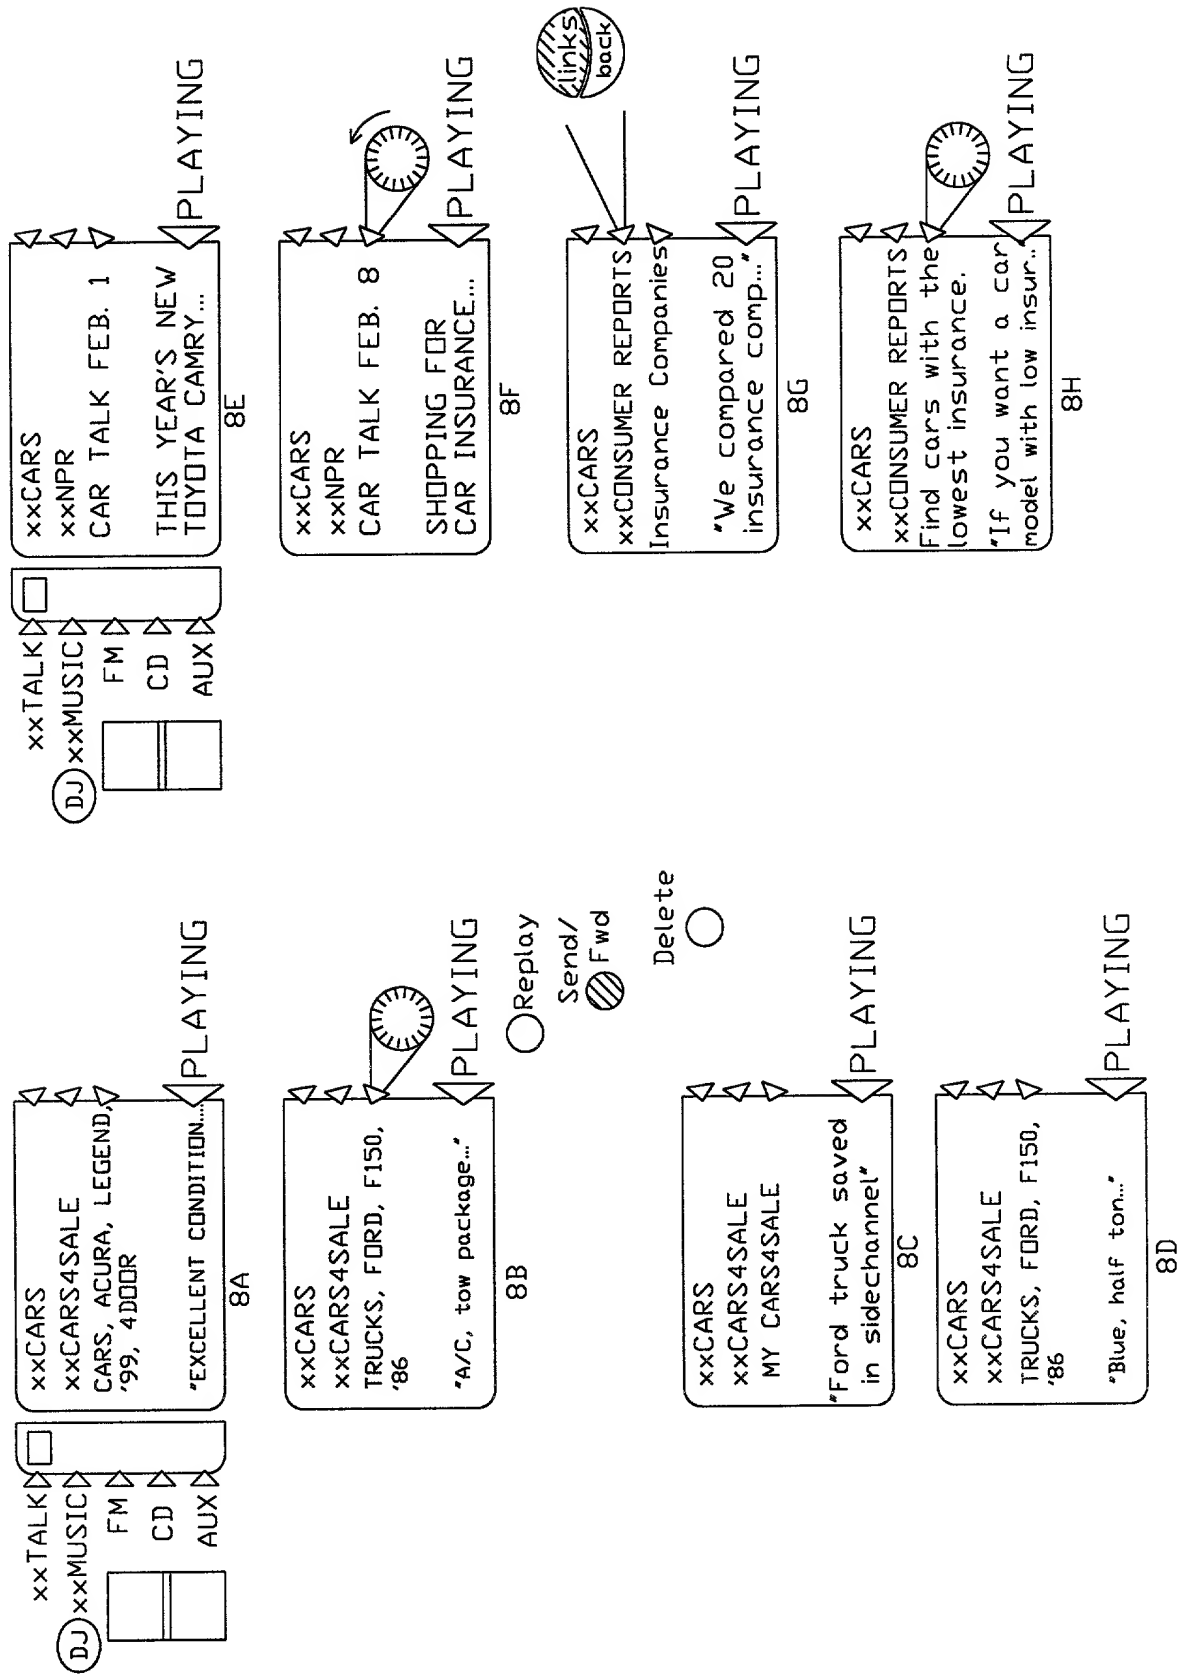 


FIG 8

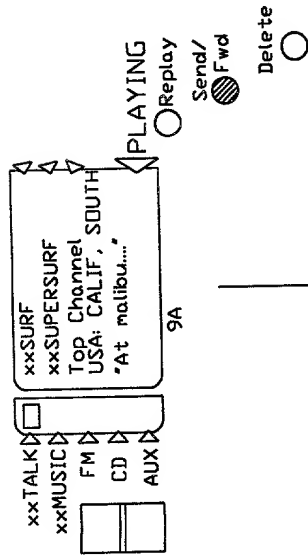 


FIG 9

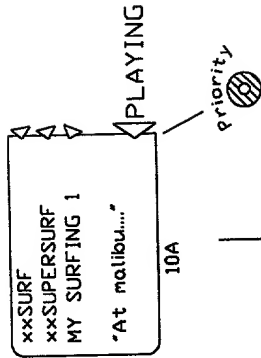 
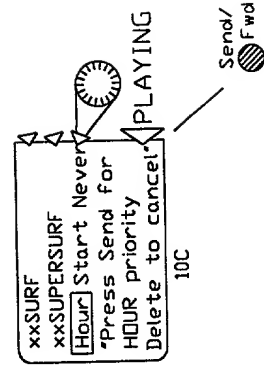 
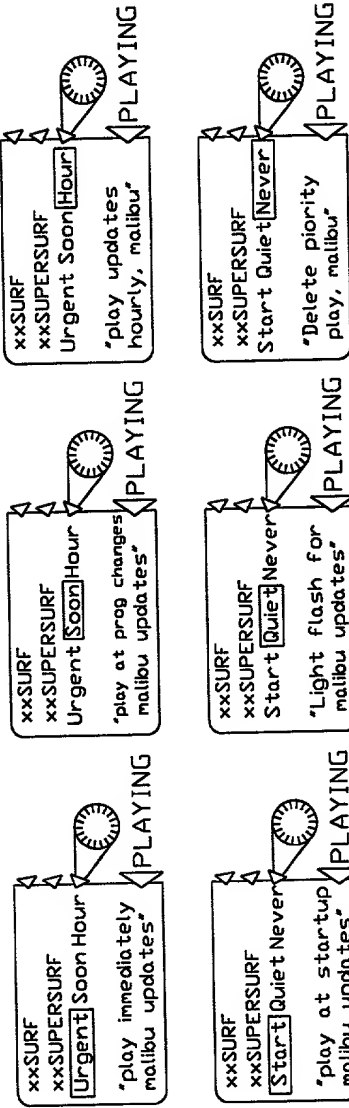 
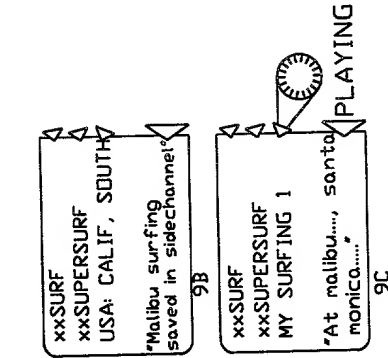 


FIG 10

OPTIONS



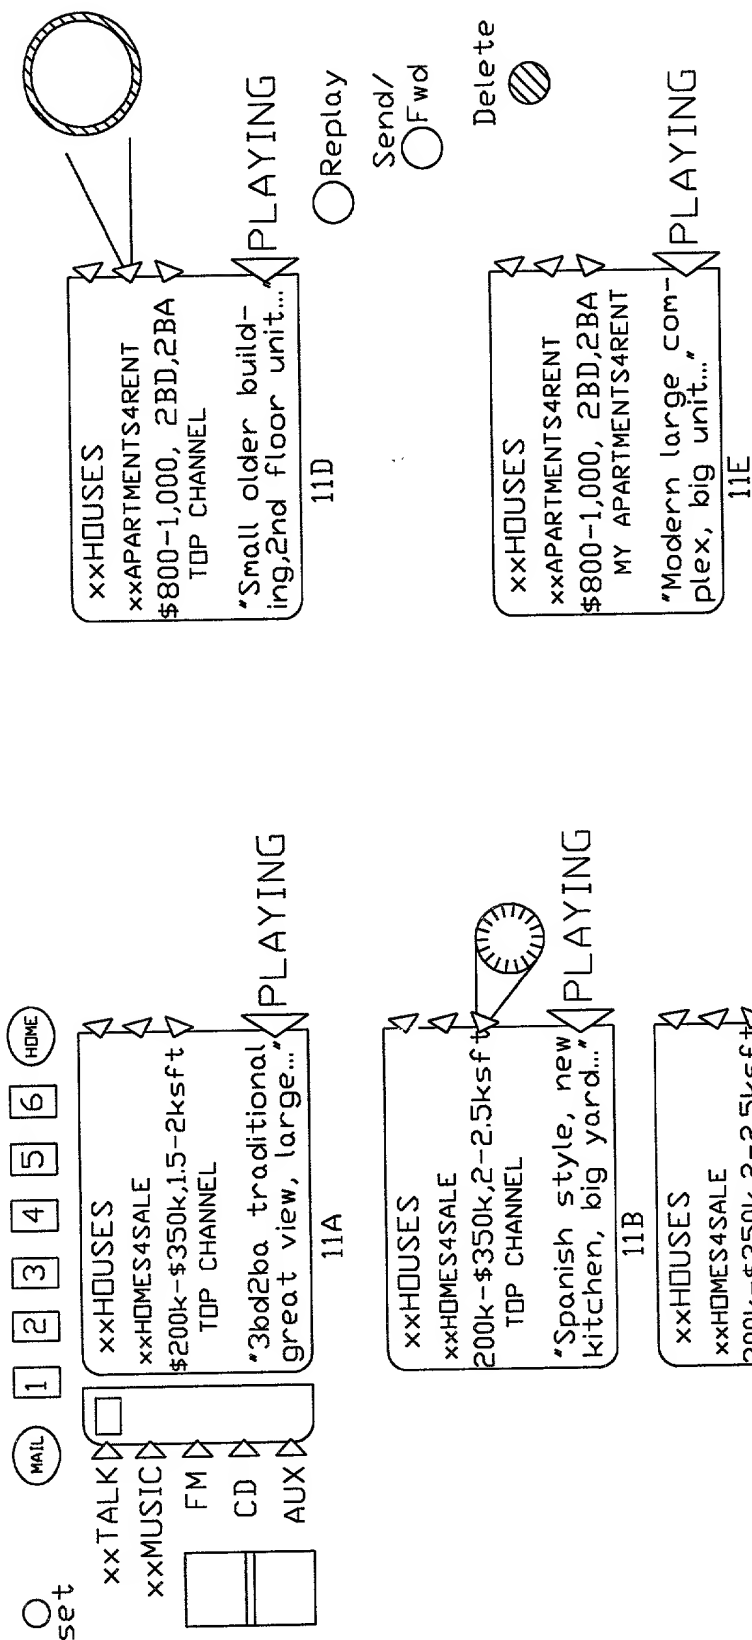 


FIG. 11

(directions incl. on sidechannel entries)

FIG. 12

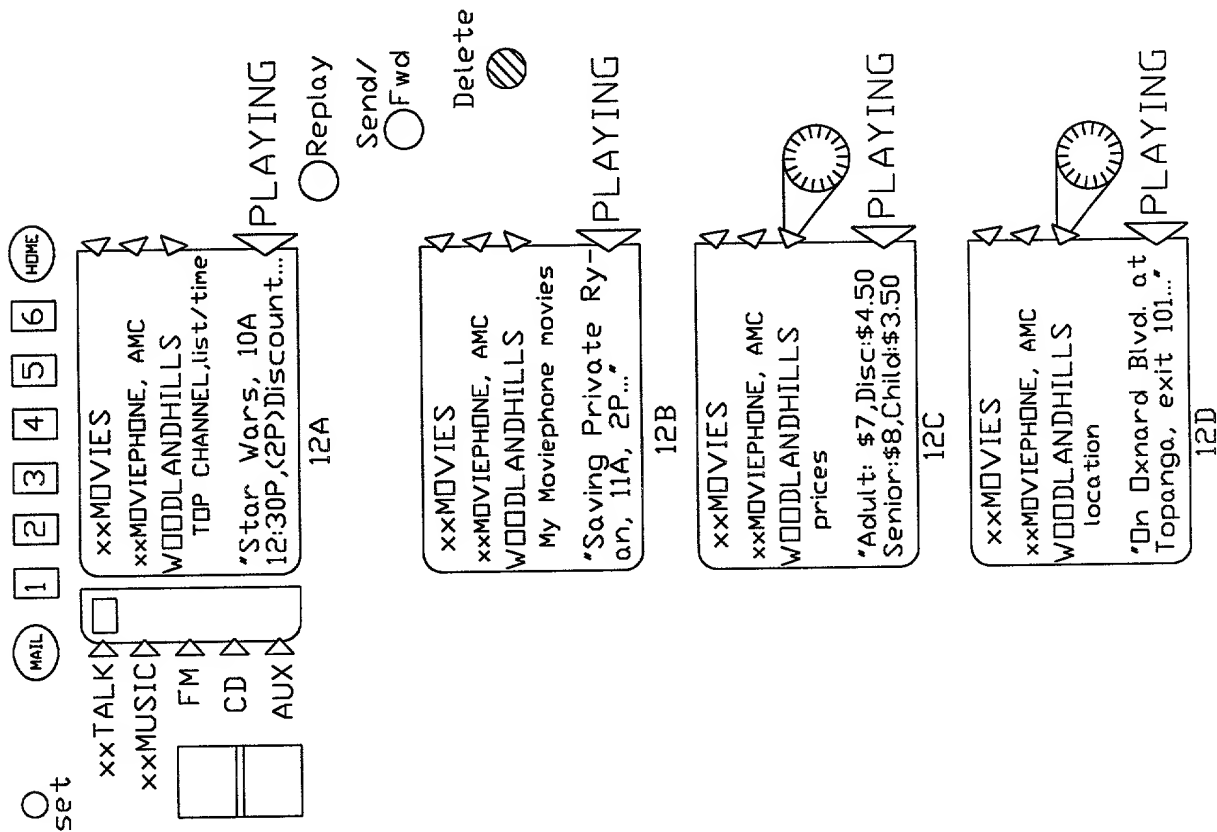 
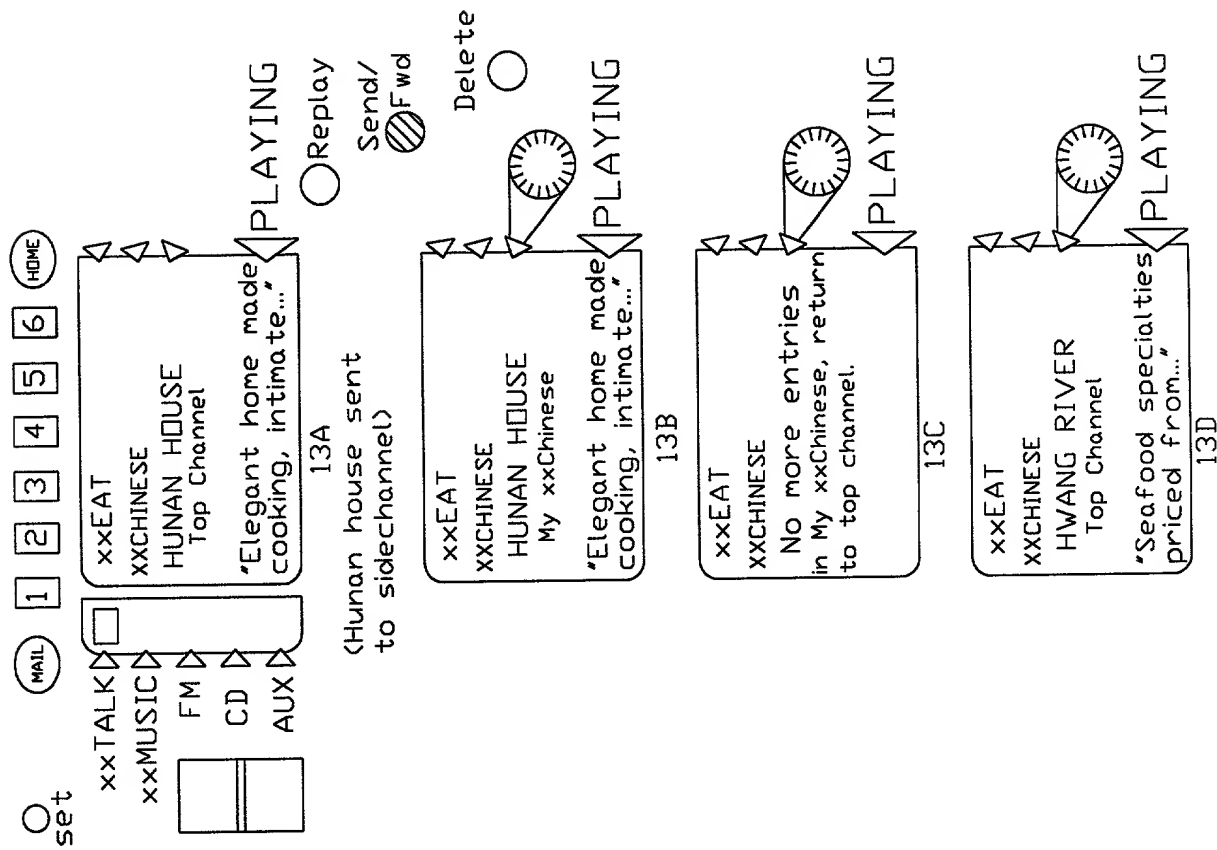 


FIG. 13



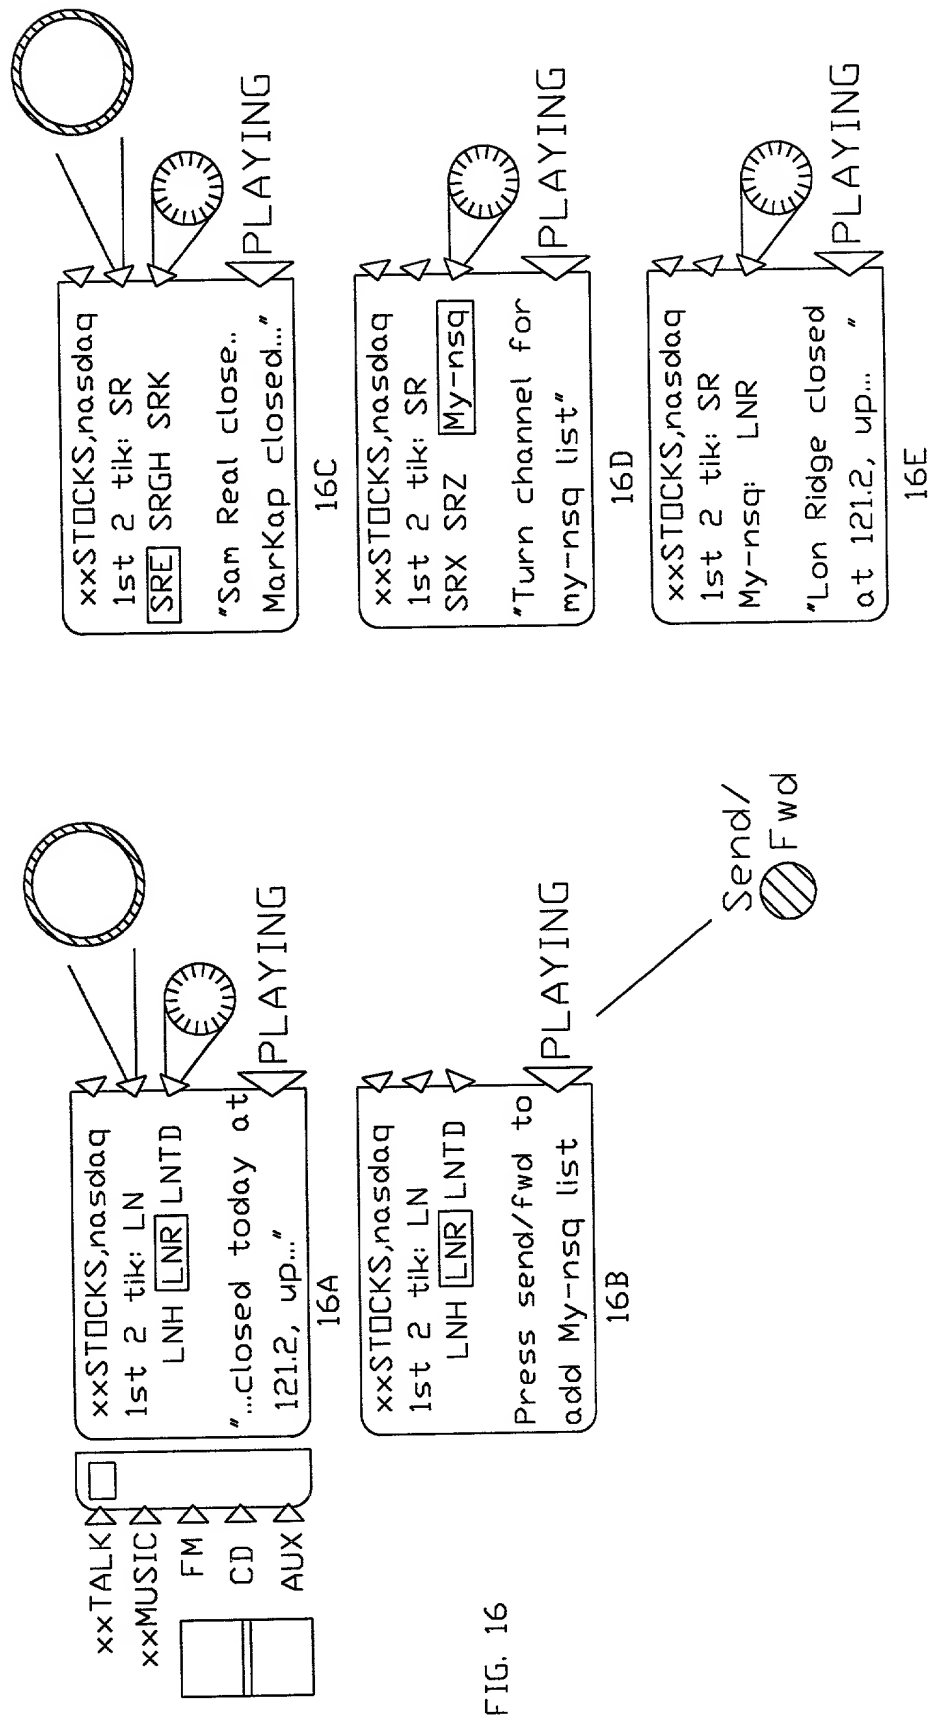 


FIG. 16

 
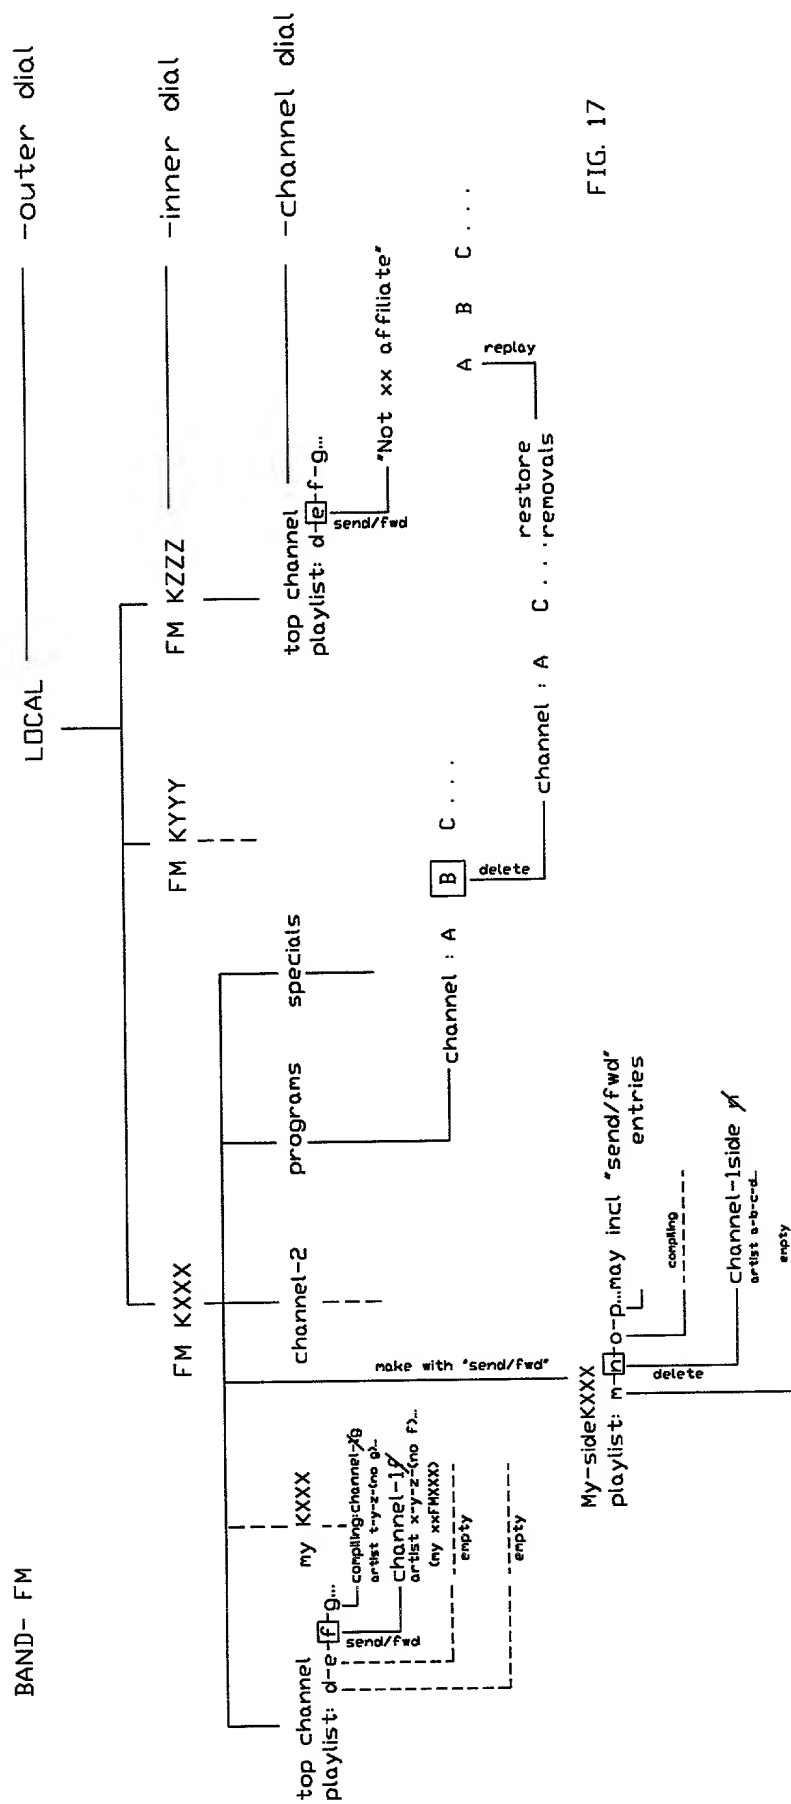 


FIG. 17

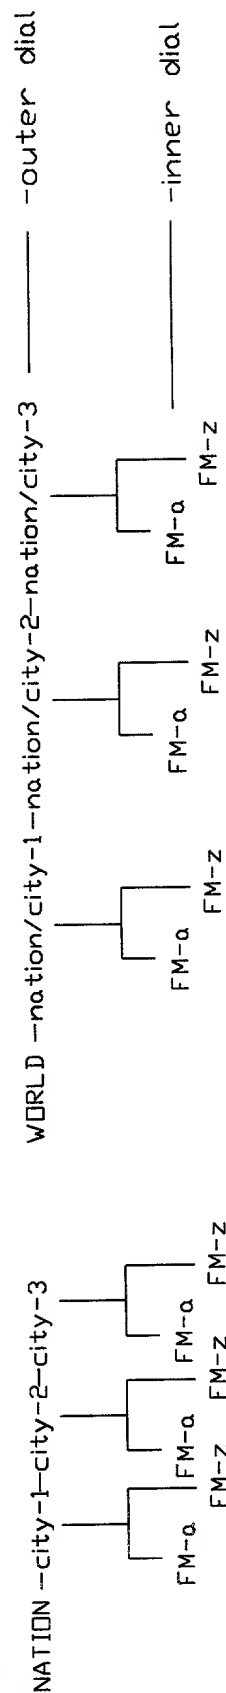

BAND- CD

outer dial — CD₁ CD₂ CD₃ CD₄ ...

inner dial — CD₁ track: a-b-c-d...end

NEW BAND

LINKS

xxSTA-X

xxSTA-Y

FMSTA-Z

playlist X:CD₁

playlist Y:CD₁

playlist Z:CD₁

Fig. 19